Trusted. Tested. Tough.®

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347 SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961 TEL: (502) 778-2731 • 1 (800) 928-PUMP • FAX: (502) 774-3624 SECTION: 2.50.030 FM1596 1019 Supersedes 0717

do not contain mercury.

Visit our website: zoellerpumps.com

ELECTRICAL CONTROL PANELS - FOR SIMPLEX INSTALLATIONS


An Electrical Control Panel is used on a Simplex pump application where automatic electrical cycling of the pump is desired for added protection in residential or commercial applications. A Control Panel is required for all systems using a nonautomatic pump. The built-in alarm system, a standard feature, will activate when the water level becomes unusually high. All electrical systems must be installed by a qualified electrician and according to the National Electrical Code. (See Section 430-71 though 430-113, plus any others that apply.)

SINGLE PHASE CONTROL PANEL FEATURES

- 115-200-230 Volts •
- Dead front panel
- . Clear inner door (10-0125 only)
- Includes (3) 20 ft. control float switches .
- . Equipment disconnect (10-0125 only)
- Motor contactor (all models except 10-1019 and 10-1023) •
- NEMA 4X watertight enclosure with lockable latch .
- Top-mounted alarm light .
- . Alarm horn provides audio warning of alarm condition (83 to 85 decibel rating)
- Pump run indicator light .
- Horn silence and alarm test toggle switches •
- HOA switch (all models except 10-1019 and 10-1023) .
- Complete installation instructions included •
- Lockable latch
- 2 year warranty
- Dry auxiliary contact (not available in Plug-In Panels)

SINGLE PHASE SIMPLEX PLUG-IN CONTROL PANEL

- 115 V model 10-1019 or 230 V model 10-1023
- . NEMA 4X enclosure with hinged cover
- Receptacle for use with piggyback pump switch
- Alarm horn (83 to 85 decibel rating) •
- Terminal strip
- Horn silence switch to turn alarm on or off
- Alarm float only

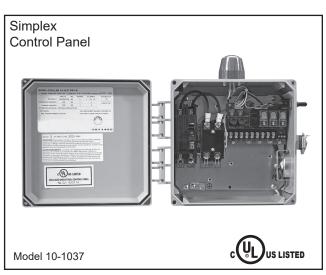



| SINGLE PHASE SIMPLEX PUMP CONTROL/ALARM SYSTEM | | | | | NOTE: 600 and X600 Series |
|--|-----------------|-----------|--------------------------|----------------------------|---|
| Item # | Volts | Amp Range | Float Switches Included | Features | single phase pumps require special panels that include |
| 10-1019 | 115 V | 0-15 | Alarm Float Only | Plug-In | start components. See Se- |
| 10-1023 | 230 V | 0-15 | Alarm Float Only | Plug-In | lection Guide FM1228 and |
| 10-1036 | 115V, 200-230 V | 0-7 | Three-20' Control Floats | Circuit Breaker Disconnect | FM1705 for correct panel selection. |
| 10-1037 | 115V, 200-230 V | 7-15 | Three-20' Control Floats | Circuit Breaker Disconnect | |
| 10-1038 | 115V, 200-230 V | 15-20 | Three-20' Control Floats | Circuit Breaker Disconnect | NOTE: All variable level float |
| 10-0125* | 115V, 200-230 V | 0-20 | Three-20' Control Floats | Equipment Disconnect | switches in this section are mechanically activated and |

* 10-0125 Branch Circuit Protection provided by the installing electrician.