

PFAAV160

Air Admittance Valves



Product Features

- Rated 160 DFU's for venting DWV 4" and smaller
- Unique technology opens at -0.01 psi and seals at 0 psi and above
- Screening on air inlets to guard the seal
- Protective rubber sleeve provides grip for installation and keeps valve free from debris
- 100% functionally tested at 1/4" H₂O and 30" H₂O ensuring trouble free performance
- Limited Lifetime Warranty

Model Numbers

PFAAV160	160 DFU AAV with 2 x 3 PVC Adapter
PFAAV160A	160 DFU AAV with 2 x 3 ABS Adapter

General Specifications

An air admittance valve shall be acceptable as a vent termination for any individual vent, common vent, circuit vent, loop vent, island fixture vent, vent stack or stack vent that is provided to prevent siphonage of a fixture trap. An air admittance valve is used as an alternative to secondary venting through the roof open to atmosphere.

The purpose of an air admittance valve is to provide a method of allowing air to enter the plumbing drainage system without the use of a vent extended to open air and to prevent sewer gases from escaping into a building. An air admittance valve is a one way valve designed to allow air to enter the plumbing drainage system when negative pressures develop in the piping system. The device shall close by gravity and seal the vent terminal at zero differential pressure (no flow conditions) and under positive internal pressures.

Product Location Specifications

- Should be located a minimum of 4" above the weir of fixture trap for single fixture and branch venting and 6" above flood level of highest fixture for stack venting
- Each valve should be installed in an accessible location



Installation

- Read installation instructions prior to use of this product. Always consult local plumbing codes prior to installing an AAV. Individual, branch and circuit vents are permitted to terminate with a connection to an AAV.
- The AAV will only vent fixtures that are on the same floor and connect to a horizontal branch drain. The horizontal branch drain shall connect to the drainage stack a maximum of four branch intervals from the top of the stack. AAV should be located within the maximum developed length permitted for the vent. AAV must be located a minimum of 4 inches above the horizontal board and 6 inches any insulation material and within 15 degrees of vertical.
- Every structure in which plumbing is installed shall have at least one primary stack vent. The stack vent should run as directly as possible from the building drain through to the open air.
- Apply pipe joint compound or thread seal tape to the male threads of the valve. **Remove protective rubber sleeve after installation.**
- Valves are intended for installation in the confines of a structure, cannot be exposed to outside elements and are intended for use between -40° F and 150° F. AAVs must be accessible for inspection and service.



Distributed Exclusively by Ferguson and Wolseley Canada

PFAAV160

Air Admittance Valves



Product Specification

PART	MATERIALS
A	PVC valve w unique seal technology
B	ABS or PVC Adapter

Warranty



This PROFLO product carries a limited lifetime warranty

Performance Standards

- ASSE 1050 & 1051
- ICC ESR - 1664
- NSF Standard 14
- IAPMO - classified mark
- ASTM D 2665/D 2661

Code Approvals

- International Plumbing Code (IPC) 2003
- International Residential Code (IRC) 2003

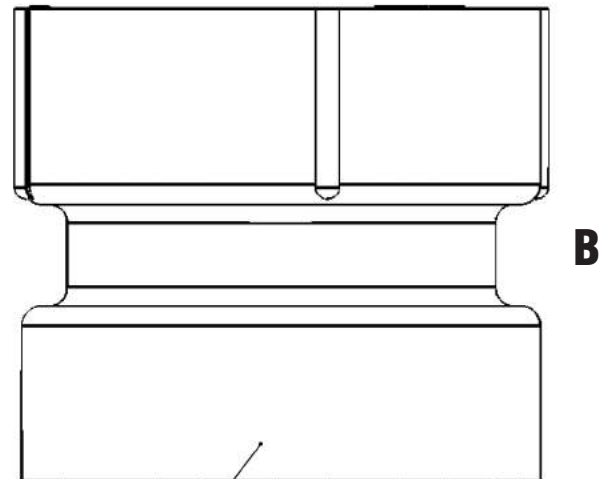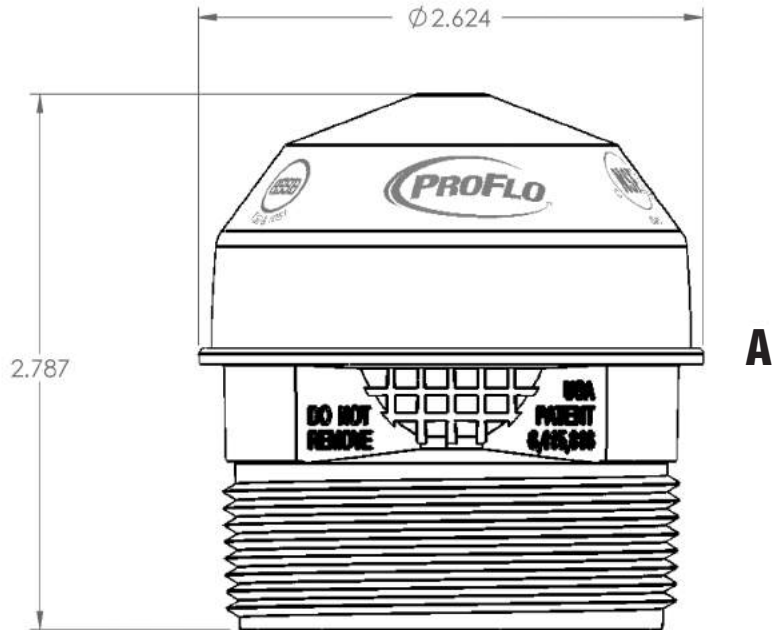

2" X 3" ADAPTER
(ABS OR PVC)

All dimensions in inches.



Distributed Exclusively by Ferguson and Wolseley Canada